
Basement Ceiling (R-16)

InfraStop® Installation Instructions

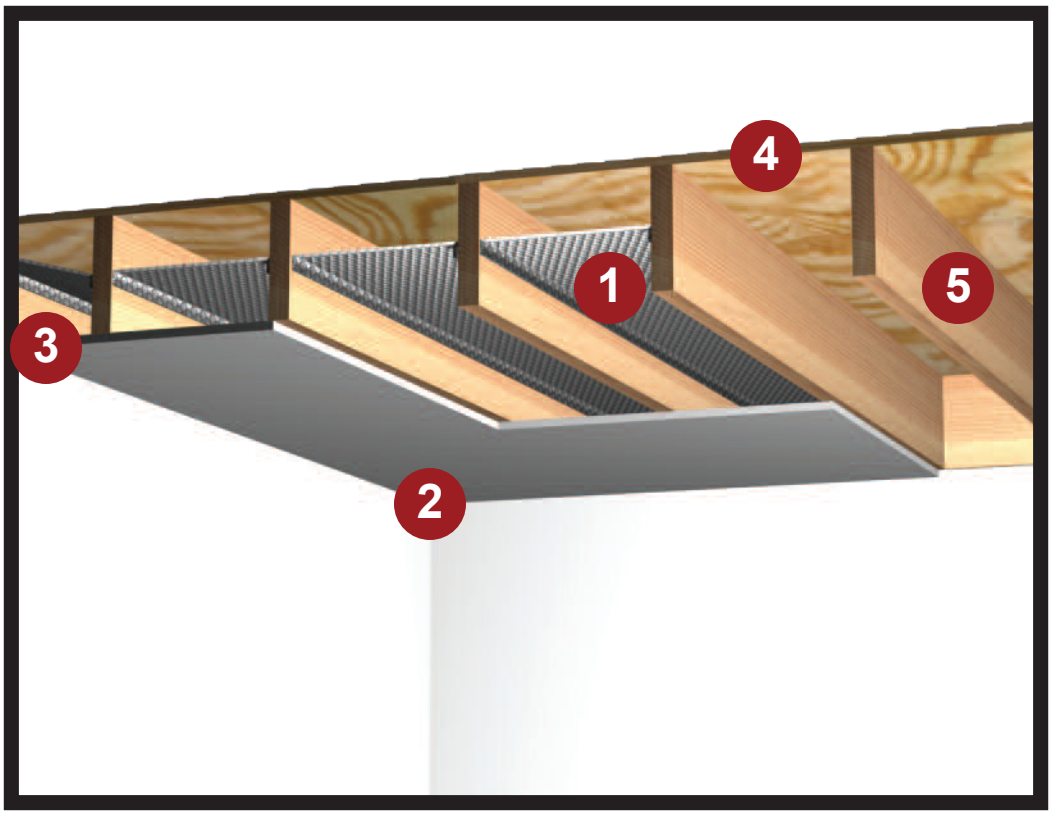

1. InfraStop® Insulation
2. Sheet Rock
3. Band Board
4. Sub-Floor
5. Floor Joist

Tools Required:
Safety Glasses
Staple Gun
Tape Measure
Utility Knife/Scissors

Recommended Products:
Reflective/Bubble/Bubble/Reflective - Roll: ISFDF24025 (24”x 25’)
Staple Tab, Reflective/Bubble/Bubble/Reflective - Roll: ISSTFDF16025 (16”x 25’), ISSTFDF24025 (24”x 25’)

Installation Instructions:

- Inspect the installation area and make any needed repairs before installing the InfraStop® Reflective/Bubble product.
- Check the basement ceiling to determine whether the joists are 16” or 24” on-center.
- Begin at one end of the house and staple the product to the top of the band board or the subfloor (also terminating this course in this fashion).
- Insert the InfraStop® half way up into the joist cavity and staple (at approximately 3” to 4” intervals) the edge of the product to the side of the joist.
- The goal is to split the joist cavity into two approximately equal enclosed air spaces.
- Finish the ceiling with the specified panel or sheetrock.

Review These Important Safety Guidelines Prior to Installation:

- **ALWAYS** check local building codes before installing InfraStop®.
- **ALWAYS** check the area you are insulating and make any needed repairs. Any worn wiring should be replaced before you begin installing InfraStop®.
- **ALWAYS** make sure work areas are well ventilated and well lighted.
- **ALWAYS** use eye protection when operating a staple gun.
- **ALWAYS** use caution and common sense when using a staple gun. Be aware of where electrical wiring is located. Stapling into a wire can cause severe shock or death. **NEVER** staple into electrical wiring.
- **ALWAYS** be careful when working with large pieces of InfraStop® on windy days.
- When installing InfraStop® on bright sunny days, it is best to wear sun glasses.
- Do not work in areas such as attics when temperatures are too hot.
- Visit our website at **www.insulationstop.com** for additional product and installation information.

Please Note:

The intention of these Installation Instructions and 3-D renderings are for the sole purpose of illustrating the correct location and relative position of the InfraStop® products in specific building assemblies. The correct construction methods and techniques are the responsibility of the installer or contractor. The methods outlined are recommendations on location of the InfraStop® products as a guideline. There are no claims on the part of InfraStop® that these building assemblies are finite standards or meet building code requirements (as they can vary by region).

InfraStop®

www.insulationstop.com
Phone: 800-871-0410
Fax: 888-838-5376
Email: customer.support@insulationstop.com