


Behind Hot Water Radiator | (R-3)

R-3 and a Radiant Reflector

InfraStop[®] Installation Instructions

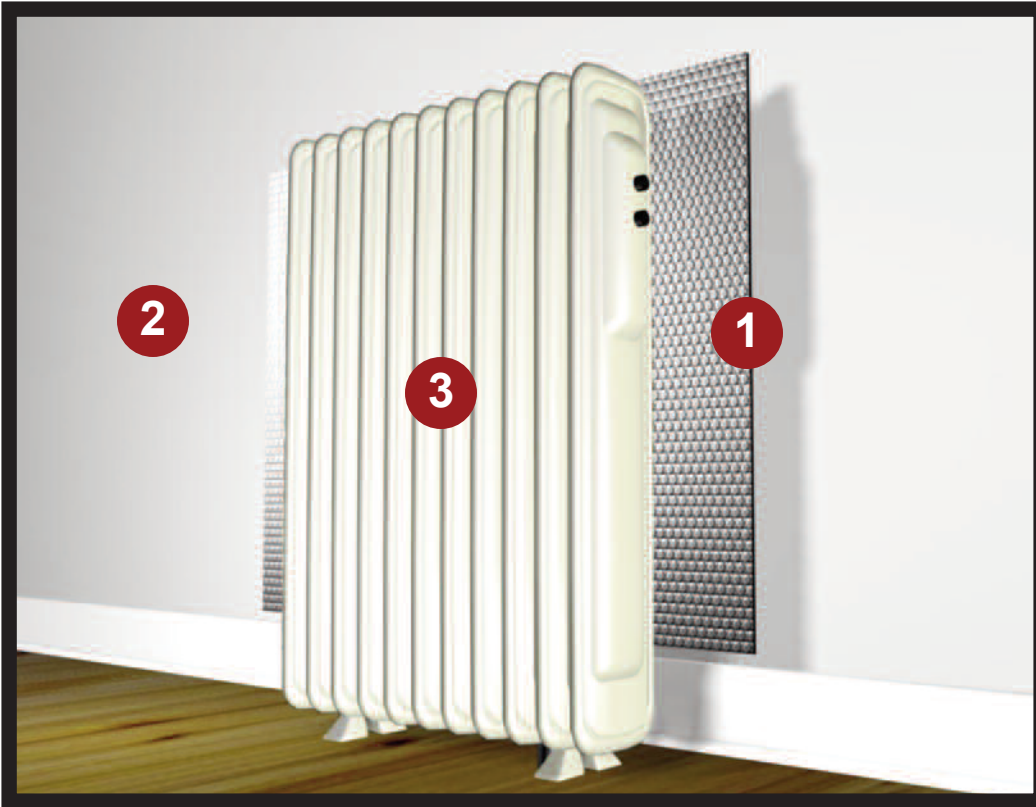

1. InfraStop[®] Insulation
2. Wall
3. Hot Water Radiator

Tools Required:

Safety Glasses
Tape Measure
Utility Knife/Scissors

Recommended Products:

Reflective/Bubble/Bubble/Reflective - Roll:
ISFDF24025 (24"x 25'), ISFDF48025 (48"x 25')

Installation Instructions:

- Measure the width and height of the hot water radiator. It is personal preference (if and) to what degree the product extends beyond the top and sides of the radiator.
- Simply cut the InfraStop[®] Reflective/Bubble/Bubble/Reflective product to this dimension.
- Install product flush to the wall and without any contact to the radiator or plumbing.
- Secure the product to the wall utilizing a double sided tape, Velcro strips, spray adhesive or staples.

Review These Important Safety Guidelines Prior to Installation:

- **ALWAYS** check local building codes before installing InfraStop®.
- **ALWAYS** check the area you are insulating and make any needed repairs. Any worn wiring should be replaced before you begin installing InfraStop®.
- **ALWAYS** make sure work areas are well ventilated and well lighted.
- **ALWAYS** use eye protection when operating a staple gun.
- **ALWAYS** use caution and common sense when using a staple gun. Be aware of where electrical wiring is located. Stapling into a wire can cause severe shock or death. **NEVER** staple into electrical wiring.
- **ALWAYS** be careful when working with large pieces of InfraStop® on windy days.
- When installing InfraStop® on bright sunny days, it is best to wear sun glasses.
- Do not work in areas such as attics when temperatures are too hot.
- Visit our website at **www.insulationstop.com** for additional product and installation information.

Please Note:

The intention of these Installation Instructions and 3-D renderings are for the sole purpose of illustrating the correct location and relative position of the InfraStop® products in specific building assemblies. The correct construction methods and techniques are the responsibility of the installer or contractor. The methods outlined are recommendations on location of the InfraStop® products as a guideline. There are no claims on the part of InfraStop® that these building assemblies are finite standards or meet building code requirements (as they can vary by region).

InfraStop®

www.insulationstop.com

Phone: 800-871-0410

Fax: 888-838-5376

Email: customer.support@insulationstop.com