
Garage Door | (R-3.0)

R-3 (Also Provides a Radiant Barrier Benefit in Warmer Climates)

InfraStop[®] Installation Instructions

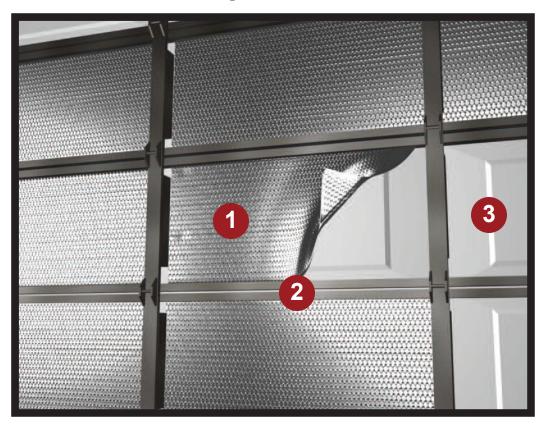

- 1. InfraStop® Insulation
- 2. Garage Door Frame
- 3. Garage Door Panel

Tools Required:

Safety Glasses Tape Measure Utility Knife/Scissors

Recommended Products:

Reflective/Bubble/Bubble/Reflective - Roll: ISFDF24025 (24"x 25'), ISFDF48025 (48"x 25')

Installation Instructions:

- Measure the door panels of the garage.
- Simply cut the InfraStop[®] Reflective/Bubble/Bubble/Reflective product to this dimension.
- Attach the product to the door panels utilizing an acrylic adhesive tape, double sided tape, spray adhesive, screws or staples.

Review These Important Safety Guidelines Prior to Installation:

- ALWAYS check local building codes before installing InfraStop[®].
- ALWAYS check the area you are insulating and make any needed repairs. Any worn wiring should be replaced before you begin installing InfraStop[®].
- ALWAYS make sure work areas are well ventilated and well lighted.
- ALWAYS use eye protection when operating a staple gun.
- ALWAYS use caution and common sense when using a staple gun. Be aware of where electrical wiring is located. Stapling into a wire can cause severe
 shock or death. NEVER staple into electrical wiring.
- ALWAYS be careful when working with large pieces of InfraStop® on windy days.
- When installing InfraStop® on bright sunny days, it is best to wear sun glasses.
- Do not work in areas such as attics when temperatures are too hot.
- Visit our website at www.insulationstop.com for additional product and installation information.

Please Note:

The intention of these Installation Instructions and 3-D renderings are for the sole purpose of illustrating the correct location and relative position of the InfraStop® products in specific building assemblies. The correct construction methods and techniques are the responsibility of the installer or contractor. The methods outlined are recommendations on location of the InfraStop® products as a guideline. There are no claims on the part of InfraStop® that these building assemblies are finite standards or meet building code requirements (as they can vary by region).

InfraStop®

www.insulationstop.com Phone: 800-871-0410 Fax: 888-838-5376

Email: customer.support@insulationstop.com